



GrimmSpeed Install Guide Series

Adjusting the GrimmSpeed Downpipe for a VF40 Equipped Legacy Updated 6/10/14

Introduction: This guide will illustrate the adjustment necessary to avoid interference between the divider tab and IWG flapper.

Tools: The tools listed below are suggested for this task (figure 1).

- Adjustable wrench

Procedure:

1. The wastegate flapper is in a unique position on the VF40, so a small adjustment to the divider tab will be necessary to ensure proper boost control. Instead of simply shortening the divider tab across the board, this adjustment will make the divider tab as effective as possible.
2. Simply use an adjustable wrench to tweak the tab as shown. If you disconnect your internal wastegate from the flapper arm on your turbo, you'll be able to more easily test for proper clearance. Adjust the tab until you can open the flapper door without interference with the tab. All done!





Please contact us if you have any questions during installation.
612.379.0000 or sales@grimmspeed.com

Thank you for your purchase!